



PNB-32-032

Aplicação
PNFH-0,2
PNRE-0,3
PNRG-0,3

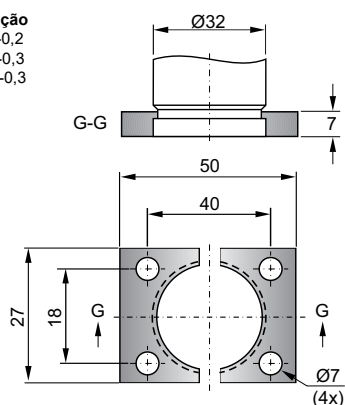


PNB-32-038

Aplicação
PNFH-0,3
PNRB-0,3
PNRE-0,5
PNRG-0,5

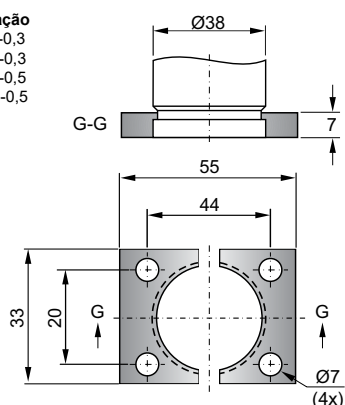


PNB-32-045

Aplicação
PNFH-0,5
PNRB-0,5
PNRE-0,8
PNRG-0,8
PNRX-0,8

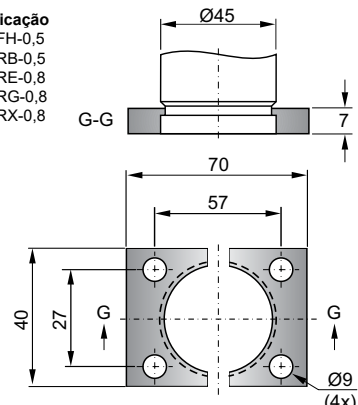


PNB-32-050

Aplicação
PNFH-0,8
PNGH-0,8
PNRB-0,8
PNRE-1,0
PNRG-1,0
PNRX-1,0
PNLH-0,5

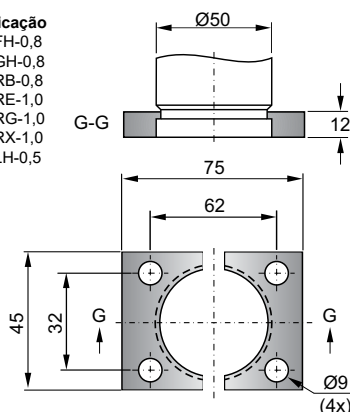


PNB-32-063

Aplicação
PNRE-1,5
PNRG-1,5
PNRX-1,5

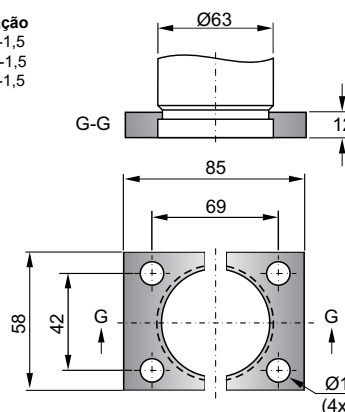


PNB-32-075

Aplicação
PNFH-1,5
PNGH-1,5
PNRB-1,5
PNRE-2,4
PNRG-2,4
PNRX-2,4
PNLH-0,8

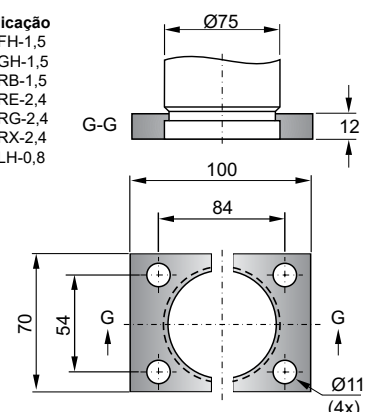


PNB-32-095

Aplicação
PNFH-3,0
PNGH-3,0
PNRB-3,0
PNRE-4,2
PNRG-4,2
PNRX-4,2
PNLH-1,5

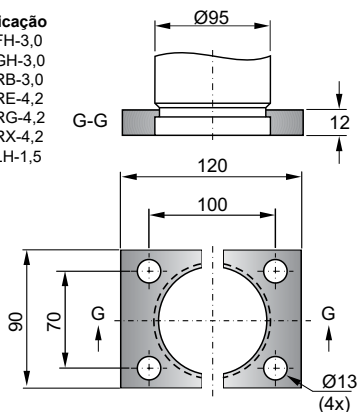


PNB-32-120

Aplicação
PNFH-5,0
PNGH-5,0
PNRB-6,6
PNRG-6,6
PNRX-6,6
PNLH-3,0

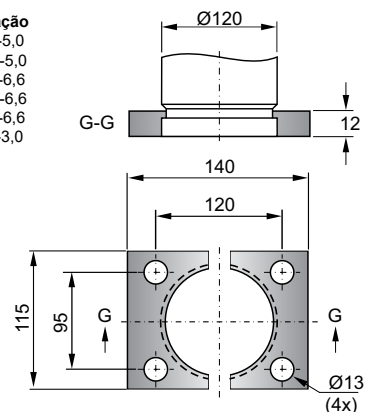


PNB-32-150

Aplicação
PNFH-7,5
PNRE-9,5
PNRX-9,5
PNLH-5,0

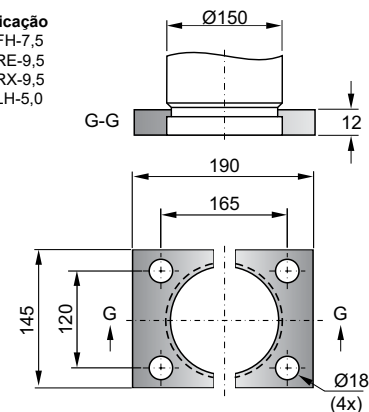

PNB-32-195

Aplicação
PNFH-10,0
PNSH-10,0
PNRE-20,0
PNRX-20,0

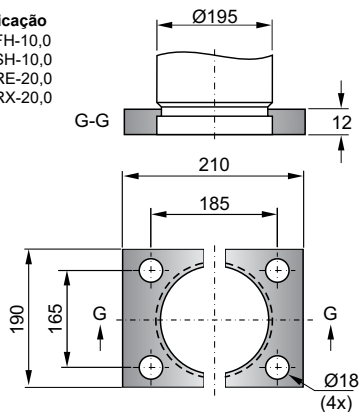

Exemplo de montagem

Imagem meramente ilustrativa



Exemplo de montagem

Não é necessário a utilização de prolongador quando interligado

