



PNB-54-025

Aplicação
PNCQ-0,2
PNRC-0,5
PNRE-0,2

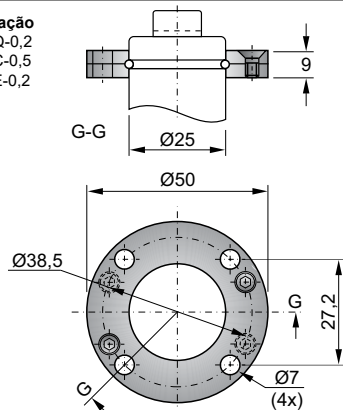


PNB-54-032

Aplicação
PNFH-0,2
PNRE-0,3
PNRG-0,3

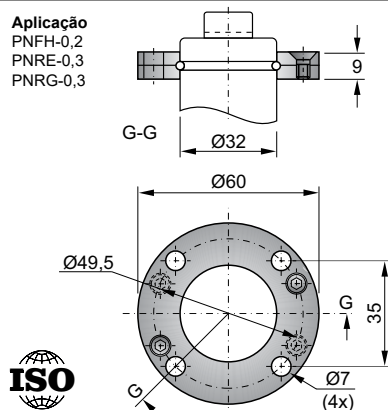


PNB-54-038

Aplicação
PNFH-0,3
PNRB-0,3
PNRC-1,0
PNRE-0,5
PNRG-0,5

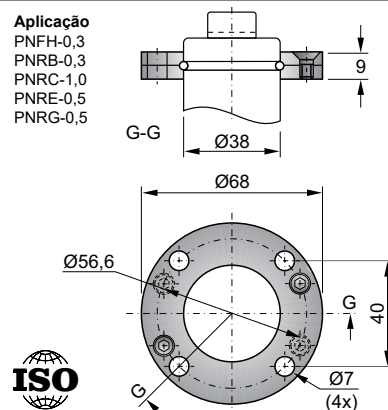


PNB-54-045

Aplicação
PNFH-0,5
PNRB-0,5
PNRE-0,8
PNRG-0,8
PNRX-0,8

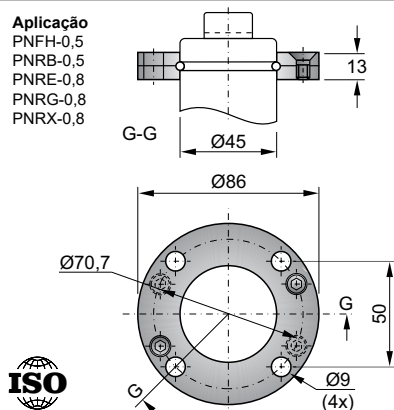


PNB-54-050

Aplicação
PNFH-0,8
PNGH-0,8
PNRB-0,8
PNRC-1,8
PNRE-1,0
PNRG-1,0
PNRX-1,0
PNLH-0,5

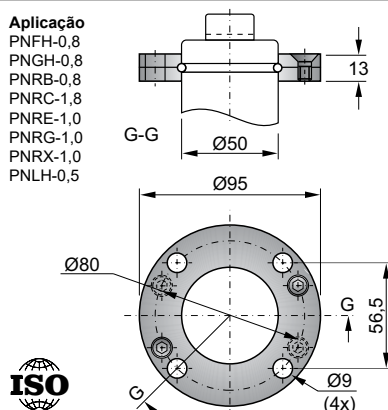


PNB-54-063

Aplicação
PNRC-2,9
PNRE-1,5
PNRG-1,5
PNRX-1,5

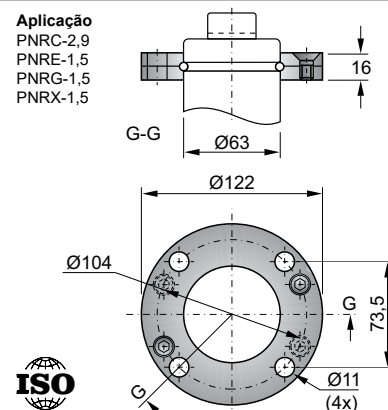


PNB-54-075

Aplicação
PNFH-1,5
PNGH-1,5
PNRB-1,5
PNRC-4,7
PNRE-2,4
PNRG-2,4
PNRX-2,4
PNLH-0,8

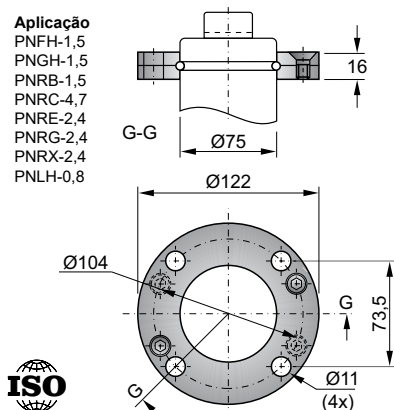


PNB-54-095

Aplicação
PNFH-3,0
PNGH-3,0
PNRB-3,0
PNRC-7,5
PNRE-4,2
PNRG-4,2
PNRX-4,2
PNLH-1,5

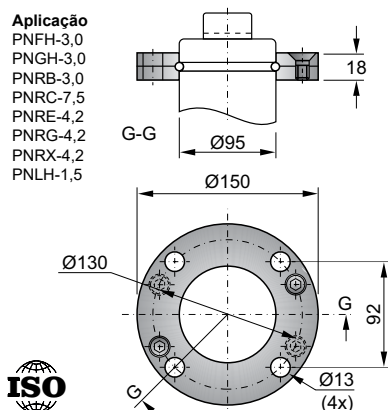


PNB-54-120

Aplicação
PNFH-5,0
PNGH-5,0
PNRC-11,8
PNRE-6,6
PNRG-6,6
PNRX-6,6
PNLH-3,0

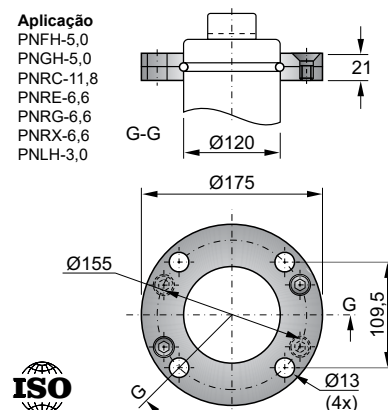


PNB-54-150

Aplicação
PNFH-7,5
PNRC-18,3
PNRE-9,5
PNRX-9,5
PNLH-5,0

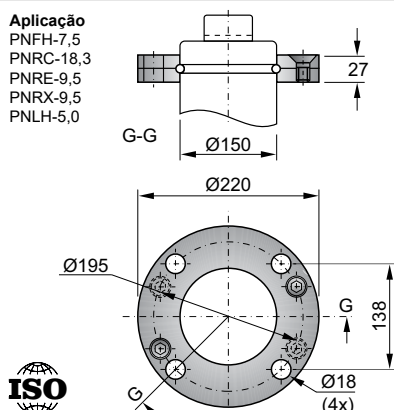

PNB-54-195

Aplicação
PNFH-10,0
PNRE-20,0
PNRX-20,0

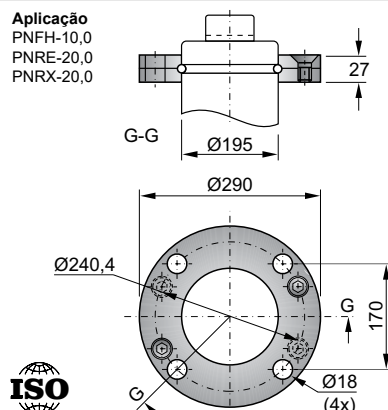

Exemplo de montagem

Imagem meramente ilustrativa

